

ActiveBoard Calibration

Connect the ActivBoard to your computer using the USB cable provided. ActivManager will detect the ActivBoard. Tap the ActivManager icon, select **Calibration** and then select **5 points** (**Quick**) or **25 points** (**Precision**). ActivBoard Touch users' **Precision** option is **16 points**.

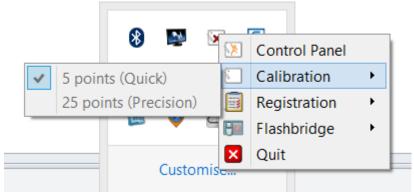

The **25 points** (**Precision**) option is recommended for use with Promethean's EST-P1 and any other extreme short throw projectors.

Tap on the cross inside the orange circle.

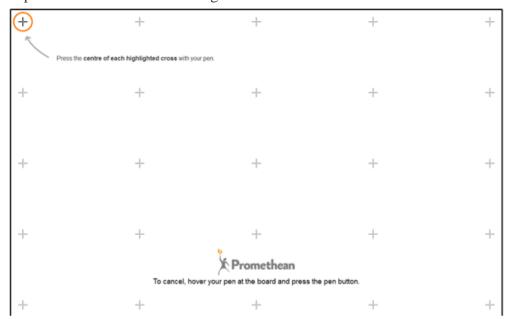

Once you have clicked on all of the crosses your ActivPen (and any touch inputs) will be aligned with the mouse cursor.

https://support.prometheanworld.com/article/1046/